




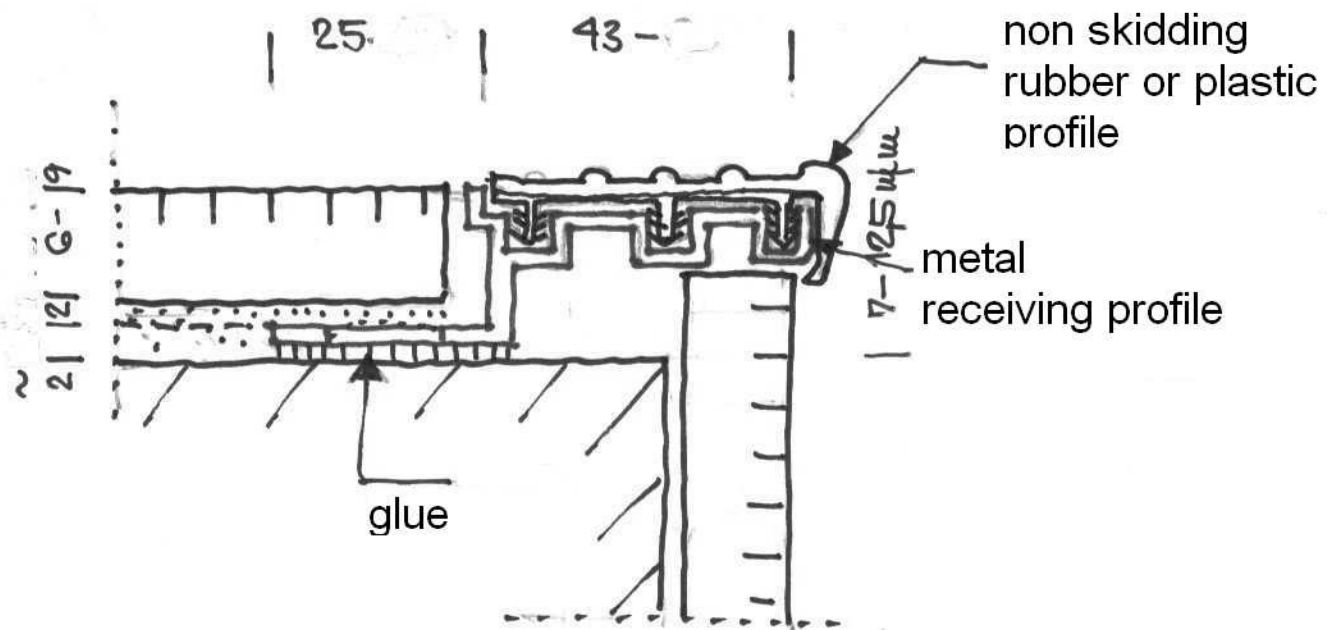


METAL EDGING

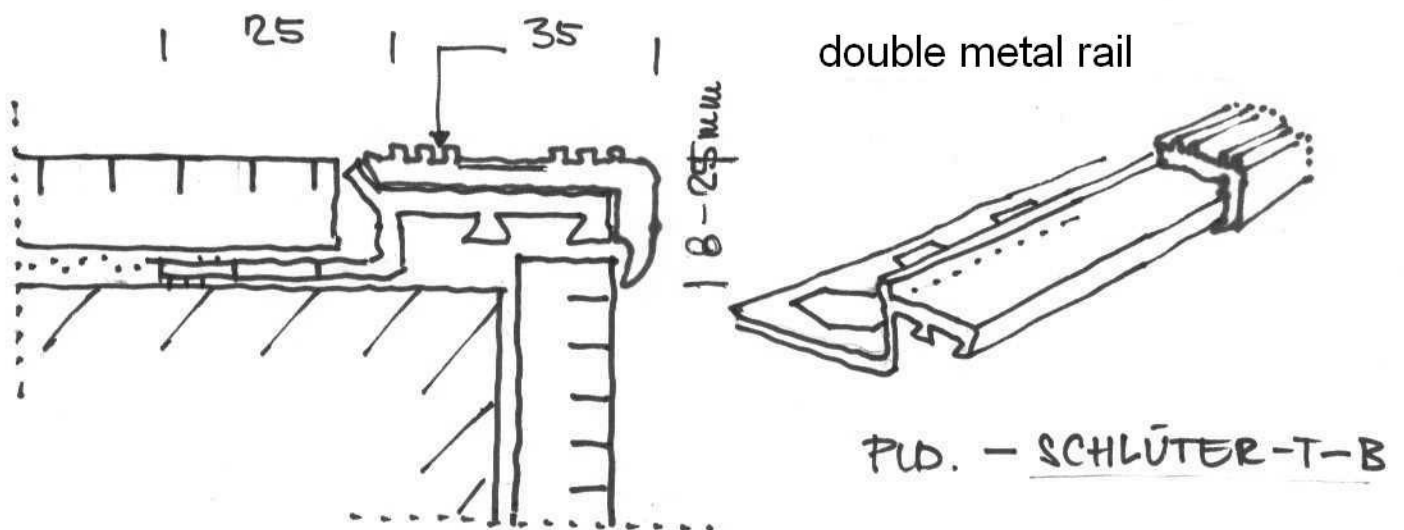


▷ REPAIR OF OLD STEP (AND MAKING NON SKIDDING)

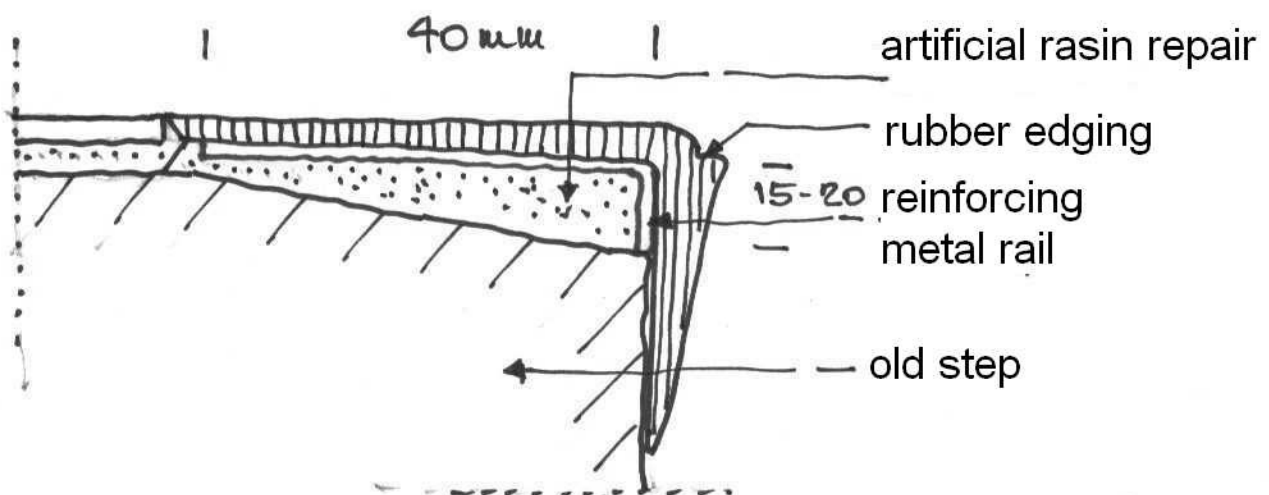

□ BT1 typ. CONDUCTED SOUND-GAP SHEET / STRIP

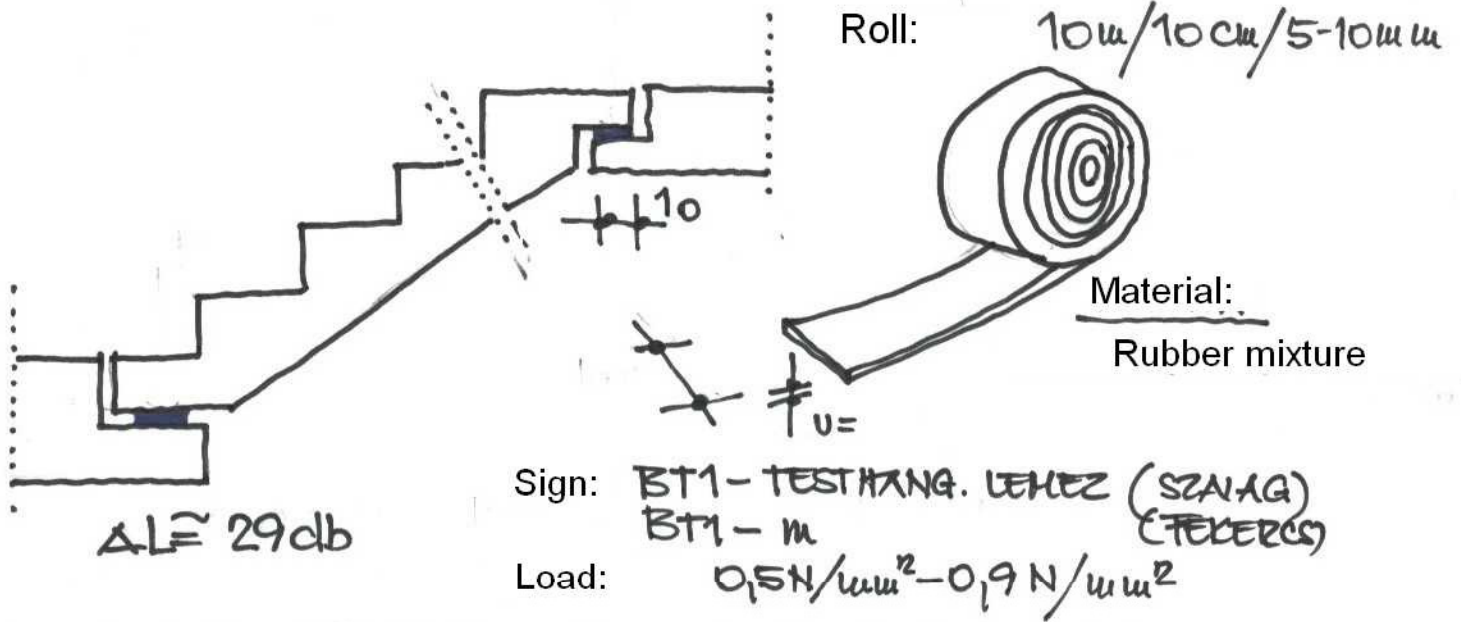

□ ELASTOMER PROFILED SHEET

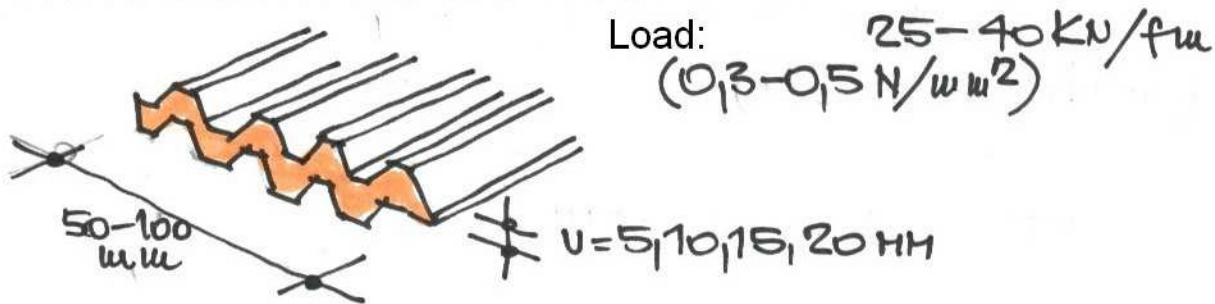


$\Delta L = \text{Correction} = 23 - 36 \text{ db}$




USE:

- For static and dynamic load as well
- For conducted sound
- $T_H = 30'$ Fire protection level
- FELTKEZELTÉNY LA'GHAN NYIRASHTESÉN VISELKE DIK

□ CONDUCTED SOUND-GAP-BOX (+ FLOATING FLOOR)

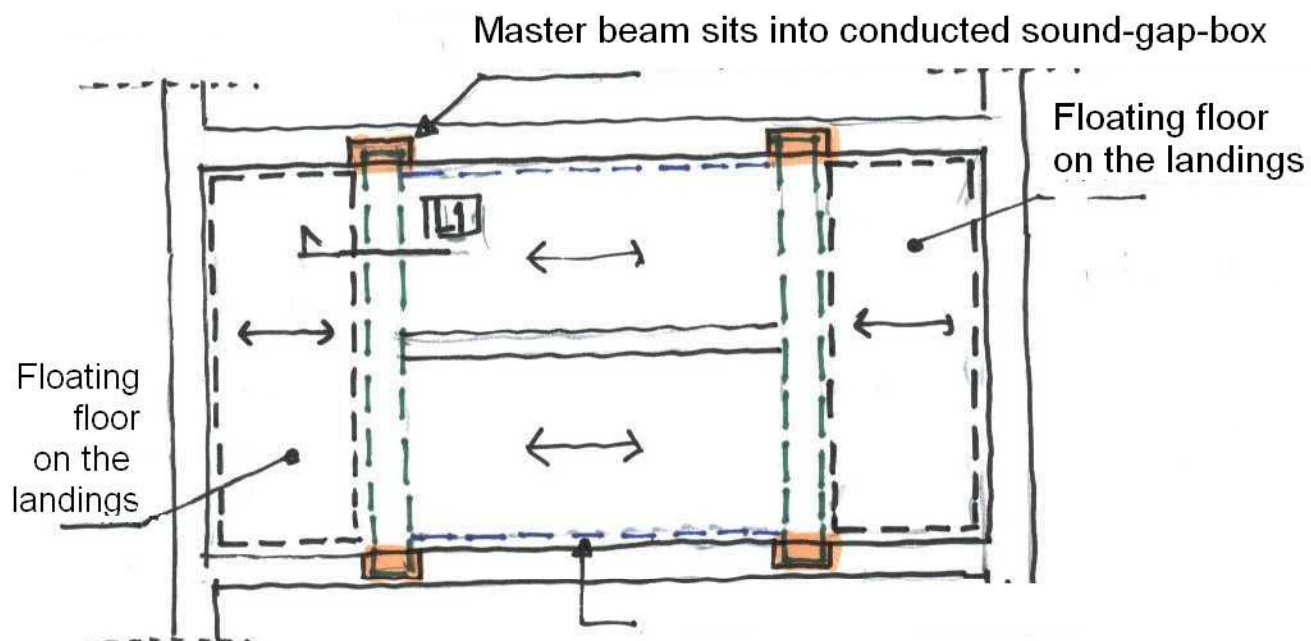


□ CONDUCTED SOUND GAP BETWEEN MASTER BEAM AND FLIGHT

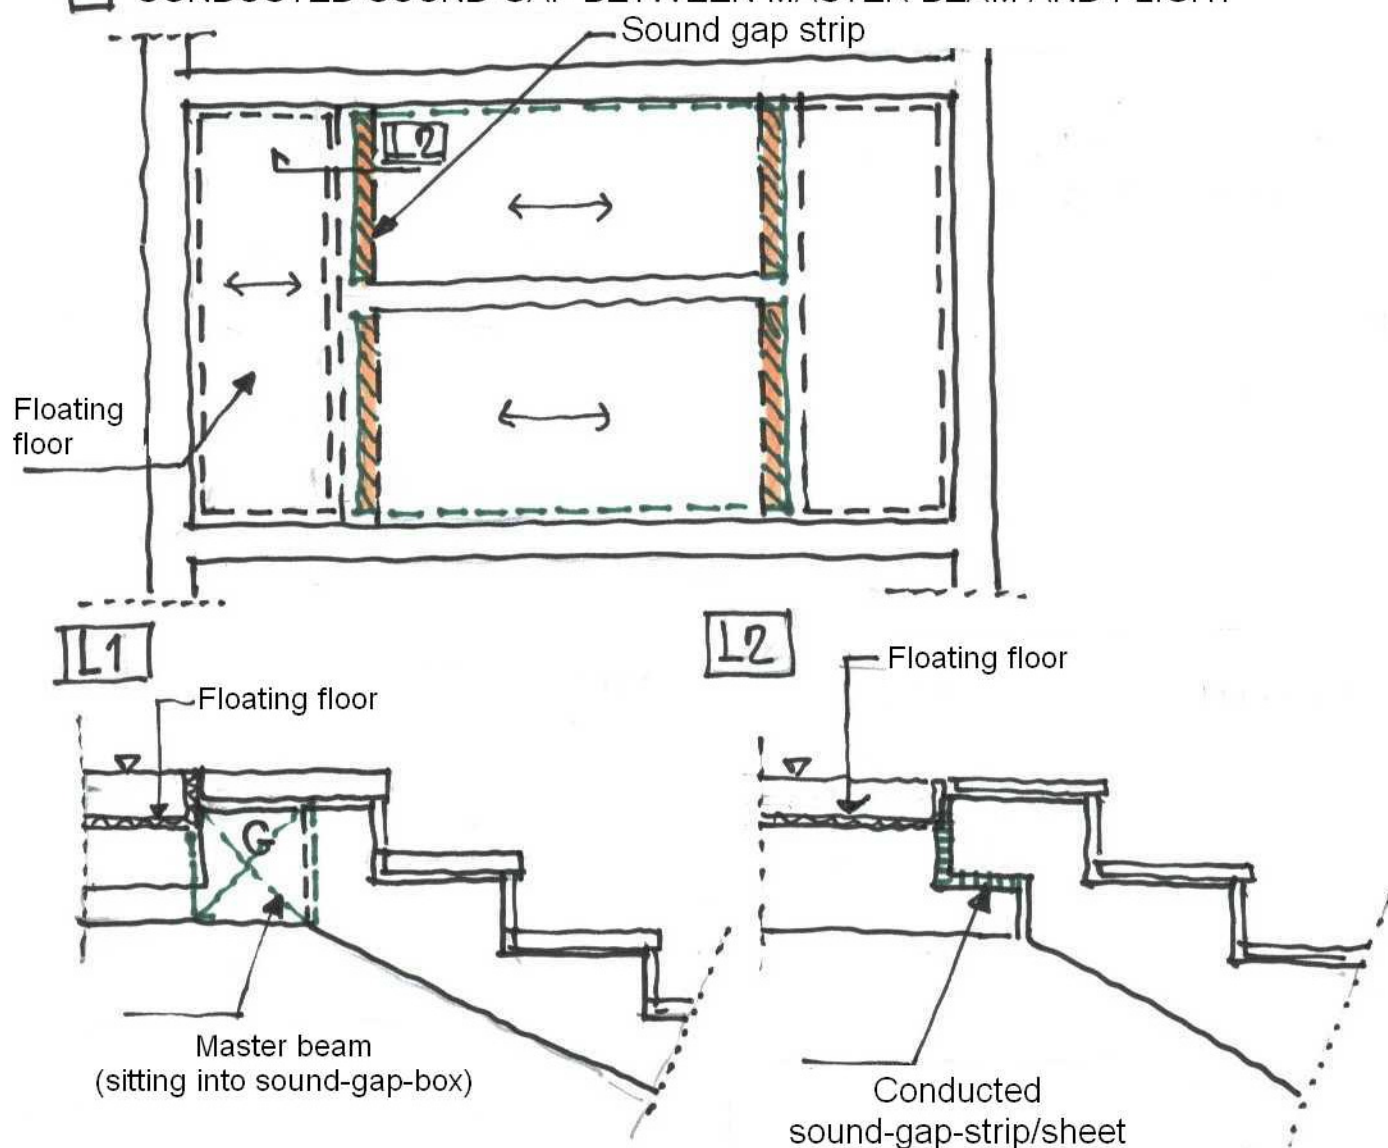


NOIS TRANSFER GAP BETWEEN FLIGHT AND LANDING

SINKING FLIGHT DETAIL

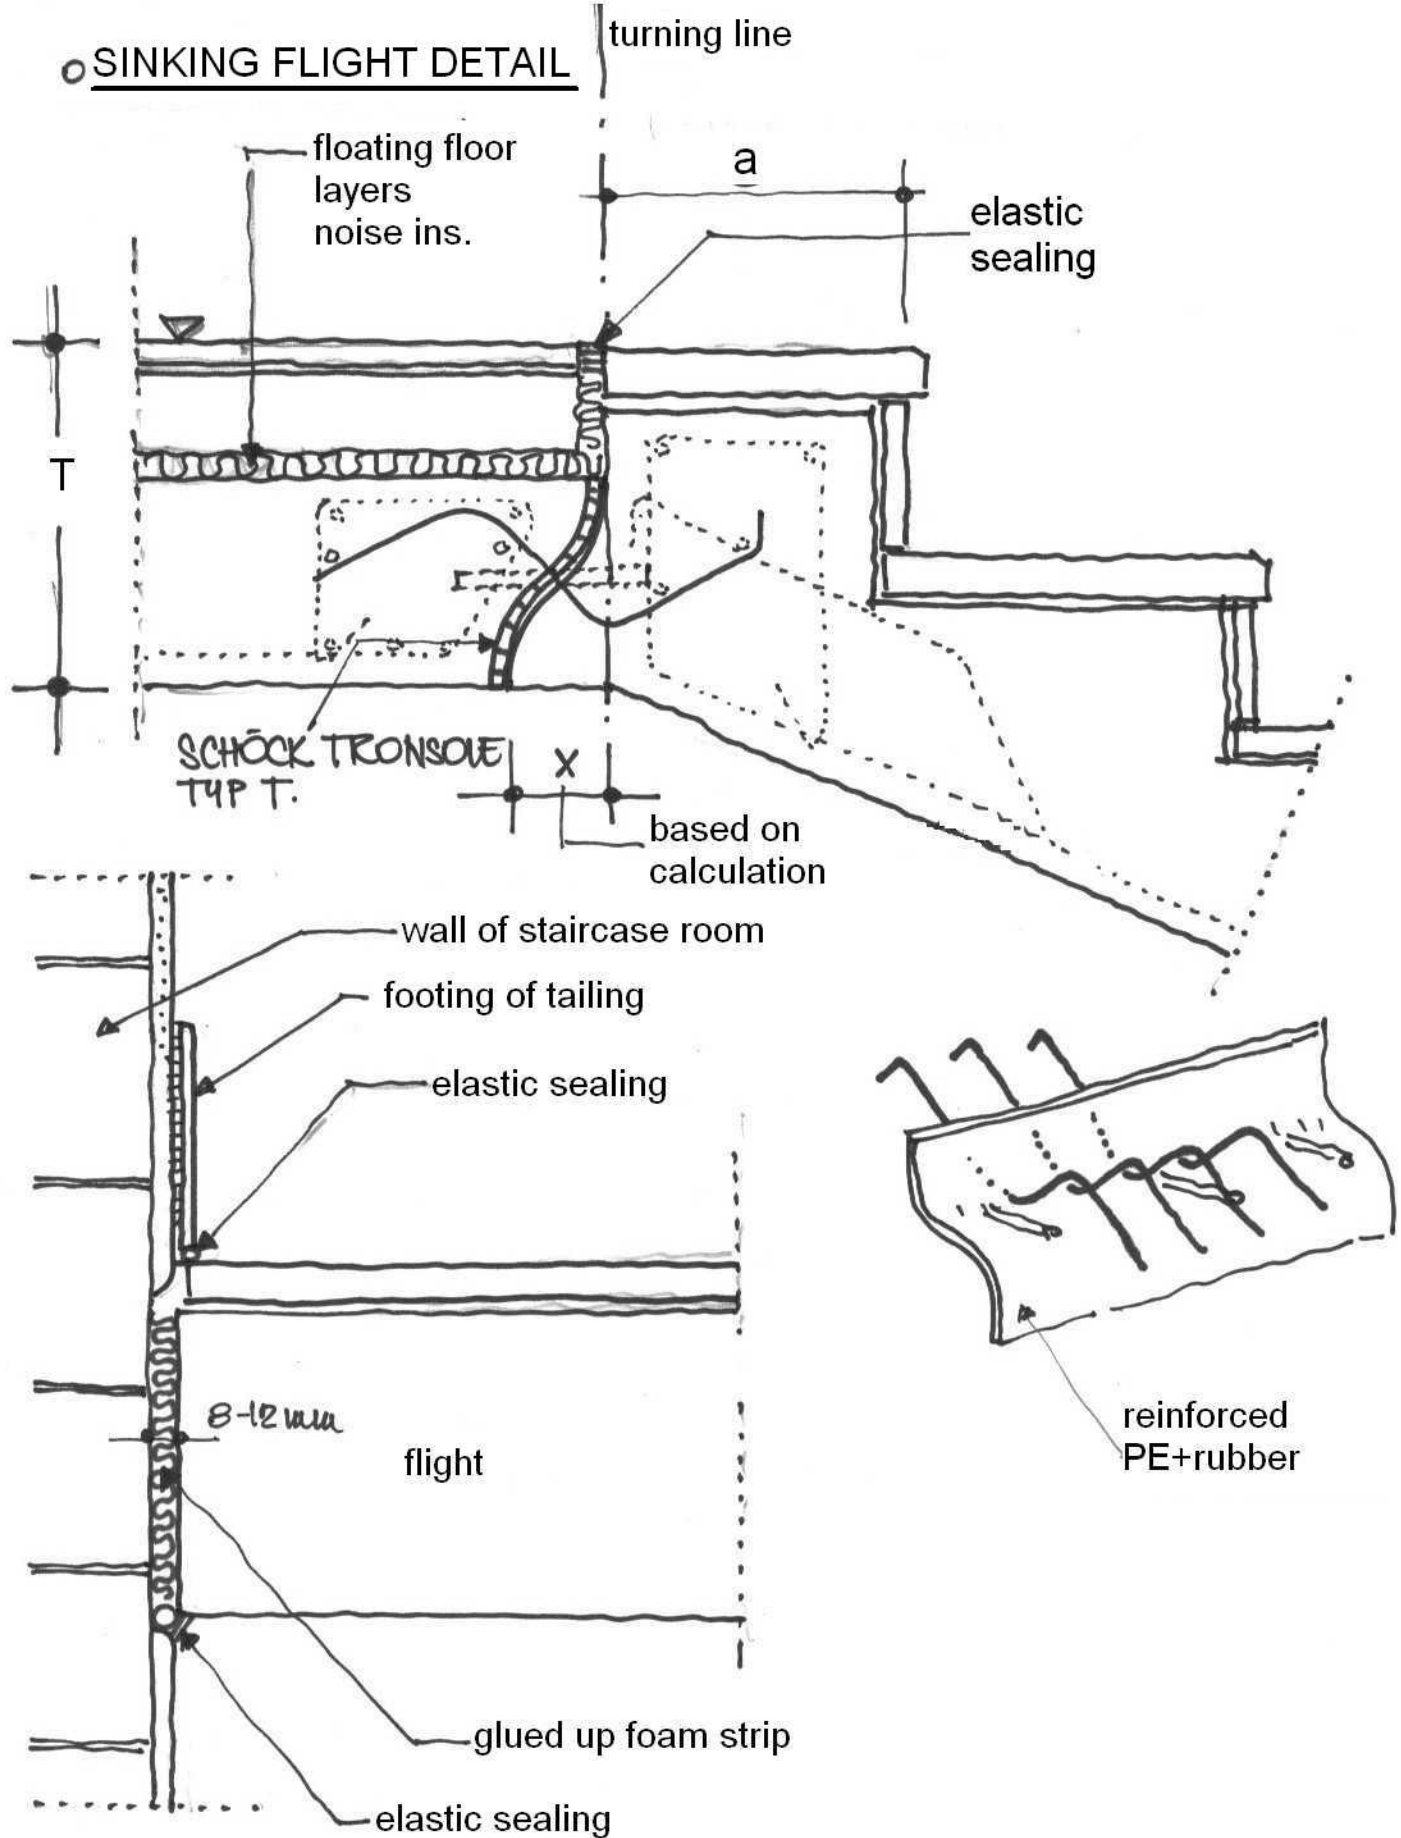

FLIGHT AND WALL CONNECTION

FORMULAS OF THE TURNING EDGE

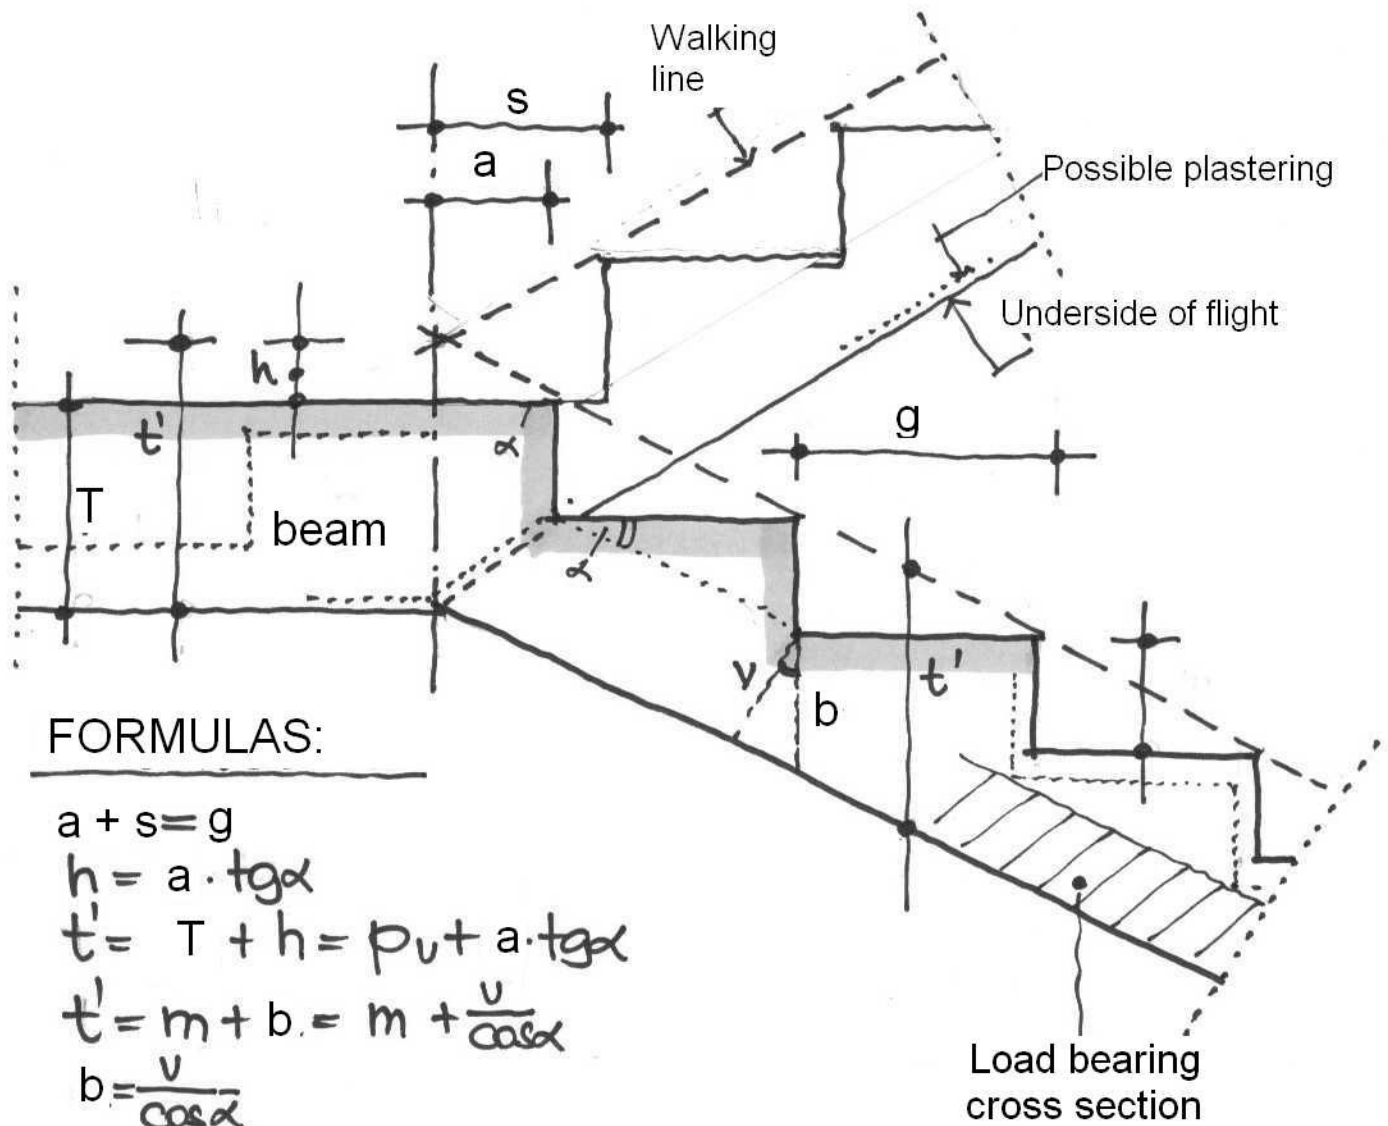

STEPS OF ARRANGEMENT WITH TURNING EDGE:

