


6.

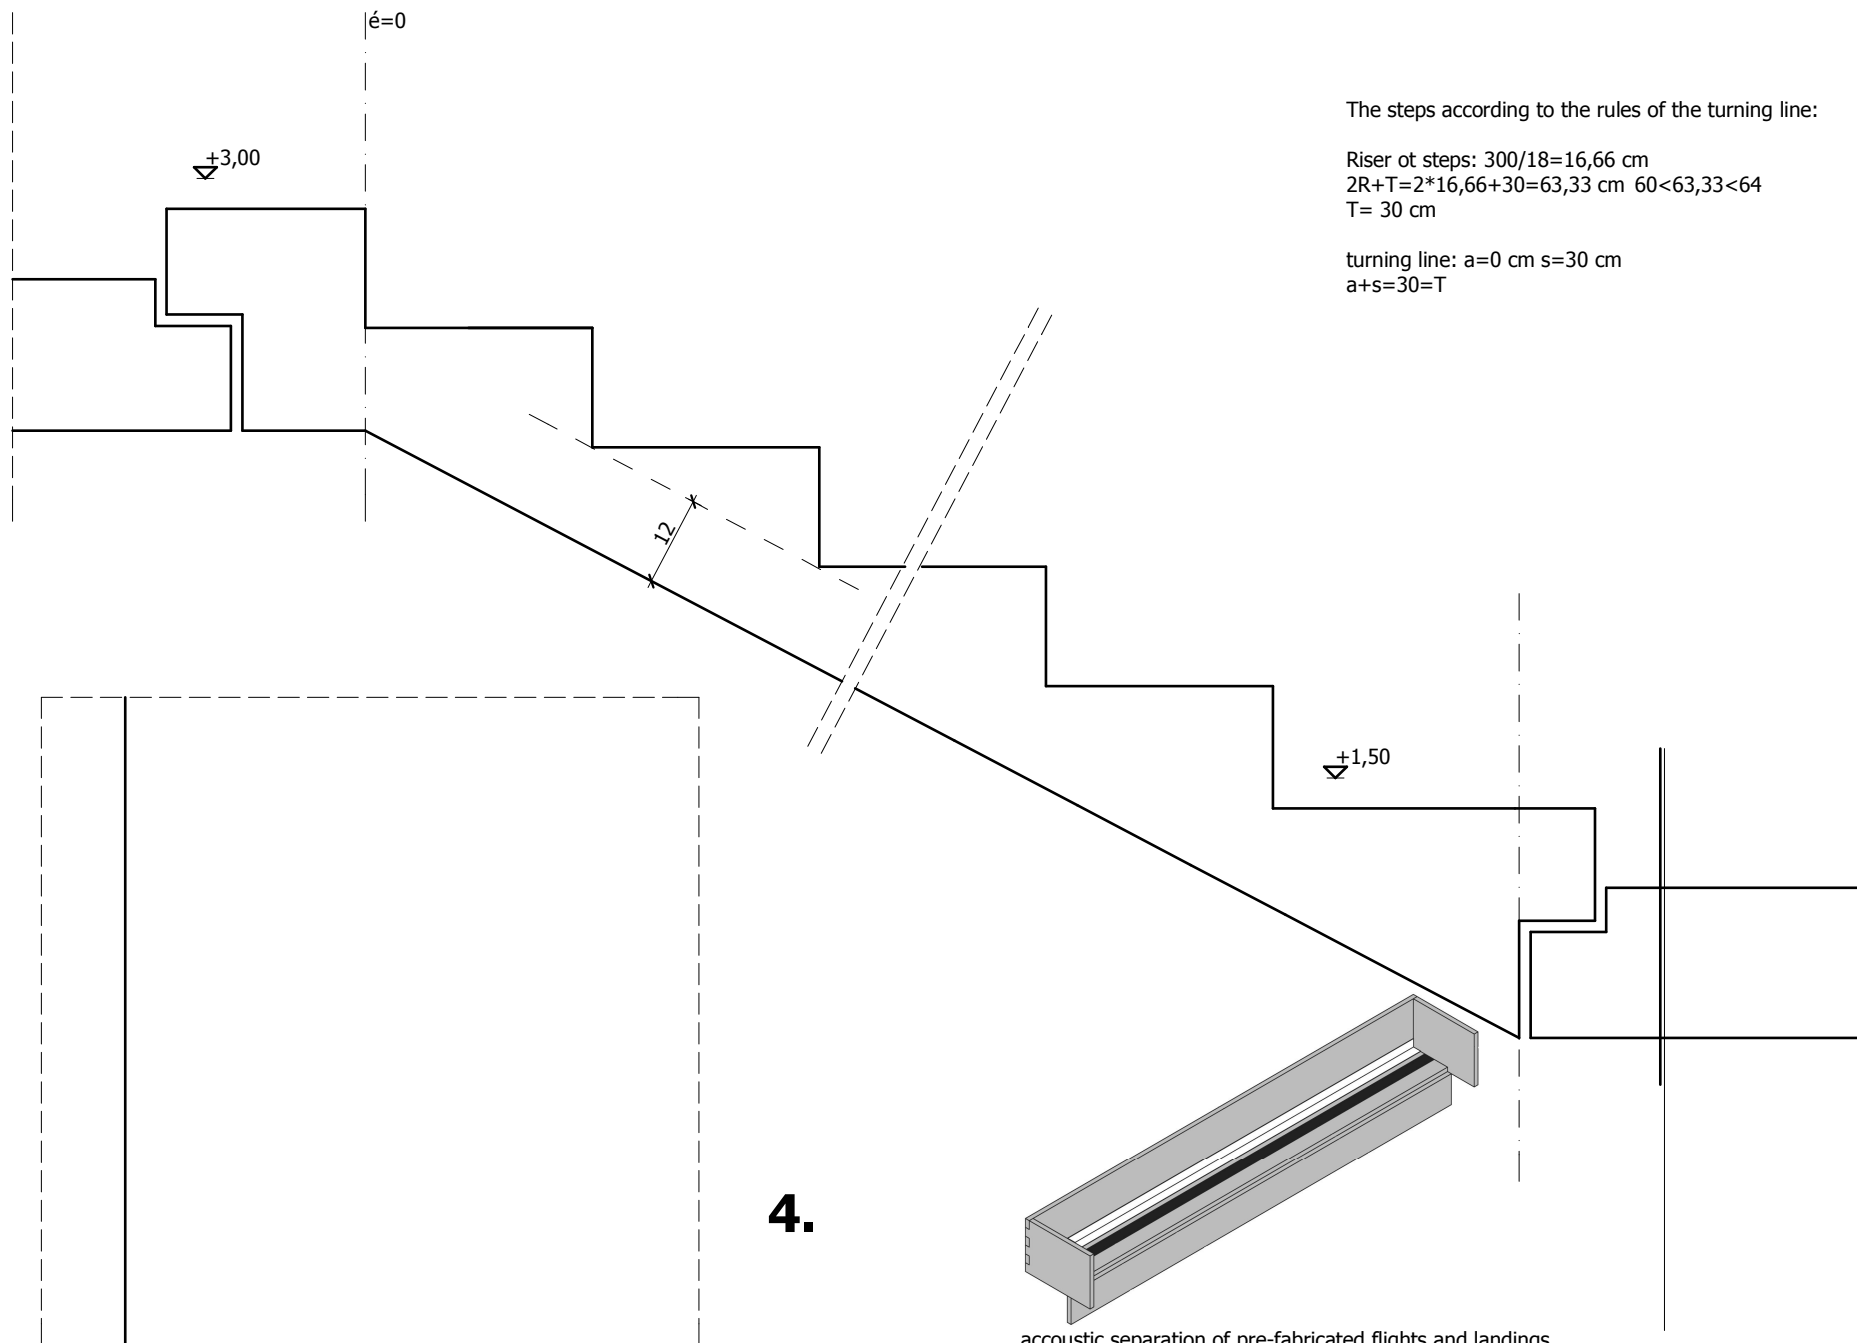

The steps according to the rules of the turning line:

Riser of steps: $300/18=16,66$ cm
 $2R+T=2*16,66+30=63,33$ cm $60<63,33<64$
 $T=30$ cm

turning line: $a=0$ cm $s=30$ cm
 $a+s=30=T$

5.

4.

acoustic separation of pre-fabricated flights and landings
 (eg.: Schöck Tronsole type F)